



2 waffles model

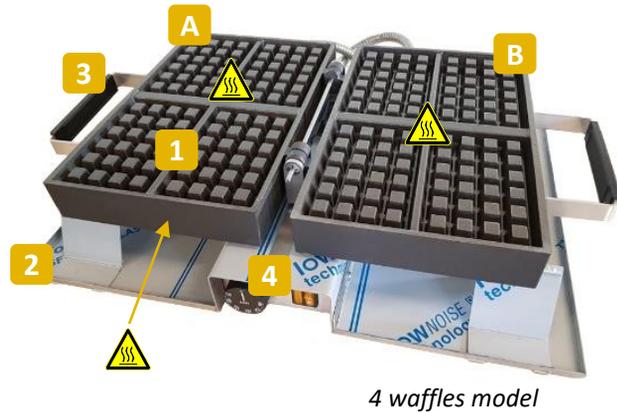

4 waffles model

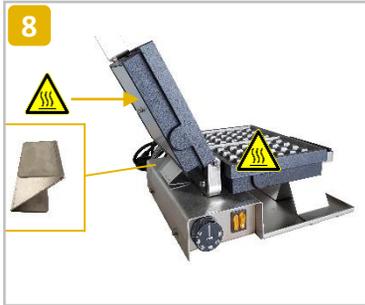

DESCRIPTION OF ELEMENTS

1. Baking plate in cast iron
 2. Stainless steel frame with removable drip trays
 3. Handles
 4. Electrical box
 5. Heating indicator button
 6. Power light
 7. Switch button ON / OFF
 8. « Z » accessory – Opening blocking
 - A Baking plate A
 - B Baking plate B
-  Hot surfaces


1/ SAFETY PRESCRIPTIONS.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
-  **ATTENTION ! Burning danger !** When using this appliance, certain surfaces will get hot. Only touch the handles to open or close the appliance. Never touch the parts mentioned (see image 2). Even after switching off the appliance, some surfaces will remain hot for some times, causing the risk of burns. Let the appliance cool off entirely before moving, brushing or storing it.
- Never leave unattended during using.
- Never immerse the appliance, the power cord or the plug in water or any other liquid.
- If the power supply cord is damaged, it must be replaced only by the manufacturer or by an authorized service center to avoid risk.
- The device must be grounding.
- Remove the plug from the power point when the appliance is not in use or before cleaning or moving
- Always place the appliance on a solid and flat base, so that the appliance won't move or turn over. Keep away from wall and any items sensitive to heat.
- Handle with care stainless steel trays or wear gloves to avoid possible risks of cuts.
- Keep the appliance in a dry place and protected from moisture.
- Allergy: Trace of Peanut oil can perhaps be found in the iron.

2/ BEFORE THE FIRST USE

- Take the appliance out of the box.
- Check if handles are strongly fixed.
- Remove the plastic and foam protection from trays and each stainless steel element.
- Check fixations of removable stainless steel trays (n° 2 - description of elements).

The trays and pyramids can be easily removed from their fixations.

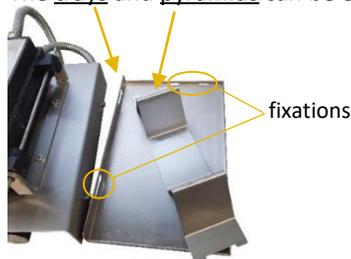

- Check that the voltage indicated on the appliance is suitable for your installation.
- Additional option : insert Z system to block the opening to 115° (cf. schema – Description of elements – n°2).
- The baking plates A and B are not interchangeable.

3/ STARTUP

This waffle iron has been protected by a food silicone to prevent the waffles from sticking.

A residual odor can be noticed during the first cooking but will disappear quickly. For this reason, the first cooking of waffles should be discarded and not eaten.

4/ CONDITIONS OF USE

- Based on your recipe, prepare your dough. This machine is only designed to cook waffles.
- The appliance is equipped with a thermostatic control :
 - With a graduation starting at 50°C/122°F where each line is = 10°C/50°F.
 - OR with 10 positions. Each level is a multiple of 30°C/86°F. Examples : 4 = 120°C/248°F ; 5 = 150°C/302°F
- Before cooking, preheat the appliance to the temperature requested
 - At least 15-20 minutes are necessary in order to obtain a temperature of +/- 180°C evenly on cooking plates.
- Switch button : when the waffle maker reaches the selected temperature, the indicator light goes out (n°6 - description of elements).
- Recommended temperature for cooking: between 150°C/302°F and 190°C/374°F.
Recommended temperature depending on the type of waffle.
- Recommended temperature for re-cooking : 80°C/176°F during max 30 sec. Only acceptable for Liège waffle.

TIPS

- A pastry release spray can be applied to quickly and evenly grease baking plates.
- When using a liquid dough like Brussels waffle :
 - When pouring the dough, fill the baking plate (A or B). Be careful to not overflow the dough over the edges of the baking plate.
 - After pouring the dough, close the waffle maker and do a complete 180° rotary of the machine. This distributes the dough and sugar evenly.
- When using a hard dough like Liege waffle, after half of the cooking do a complete 180° rotary of the machine. This distributes the dough and sugar evenly.
- To remove waffles from baking plates and to avoid burns, we advice to use a « waffle fork ».
- When there is too much caramel residues in baking plates, place a baking paper on the iron plate A or B and close the waffle maker : the sugar accumulated on the top plate will flow onto this paper. Repeat this action for the second plate.
- If a waffle sticks while it is being cooked, it may be due to the appliance which is too hot, too dirty or the coating food has disappeared. The solutions are :
 - The temperature should be turned down slightly and duration of the cooking increased
 - OR the appliance needs a cleaning (See n°5 - Clean a waffle maker)
 - OR it needs a new food coating (See n°5 – Cleaning of a waffle maker -> Coating application)

5/ CLEANING OF A WAFFLE MAKER

Baking waffles causes a lot of residues (dough and caramel). This is why it is important to keep the waffle maker in a good state of cleanliness so that the appliance is always efficient. We therefore recommend the cleaning methods listed below.

Important : Never immerse an Ampì® waffle maker in water or any other liquid.

Only removable stainless steel drip trays can be immersed, cleaned in water or in the dishwasher.

• For the daily cleaning of the waffle maker

These operations should be performed as often as possible. The more you realize them, the appliance is keeping cleaned.

• Ampì® scrapper



The scraper is an accessory made specifically for commercial waffle makers AMPI®. The tool is designed to facilitate the cleaning of the waffle machine. It helps to collect residues (pearl sugar, dough and caramel) accumulated in the cooking plate. We recommend it to perform these 3 functions:

- Re-centre pearl sugar and caramel between two bakings : Between two bakings we recommend to centre all the sugar in the middle of the baking plate (the most possible). Then after putting a ball of dough on your baking plate realize a complete 180° rotary 180° of the machine in order to extract the sugar with the next waffles. The additional benefit is that it will give a crispy, crunchy and a golden coating to your waffles.
- Remove sugar and caramel : you can also extract directly the sugar from the waffle maker mold by using a wet towel.
- Clean the waffle iron mold : when you finish to work and the waffle maker is off but still lukewarm, wrap the scraper with a wet towel and realize a cleaning between the teeth to remove residues (pearl sugar, dough and caramel)

NB : Using scraper does not damage the massive cast iron. Our baking plates are designed to last despite the use of the scraper.

• Potato starch

Use a dough made of potato starch + water. It easily removes residues of sugar, caramel and dough in the plates. Here's the procedure to be followed (estimated time: 10-15 minutes) :

1. Set the temperature of the waffle maker to 220°C-240°C (428°F-464°F) and let it reach.
2. Meanwhile mix ingredients : 120g of potato starch for 200ml of water. The mixture is liquid.
3. Open the waffle maker, pour the mix on baking plates A and B. Let the dough swell and thicken until no liquid is visible, then close the waffle maker during 5 minutes.
4. Open the waffle maker. Remove and throw away the potato starch dough which will have absorbed the residues from the baking plates.
5. Do not forget to grease the waffle maker when starting the next baking.

Note : We recommend that you do procedure when production is finished, before switching off the appliance. In this way, the machine will be in good condition to cook the next waffles.

Note : : If there's a quiet time during the day and the waffle maker is clogged, we advice to execute this last procedure and do not wait until the end of service to carry out this very useful operation.

• For the deep cleaning of the waffle maker

Perform these procedures when the cast iron plates remain dirty despite the maintenance and the two regular procedures described above.

• Pyrolysis system

Important : This operation will create smoke, so be sure to carry out this operation in a well ventilated room. Watch out for the smoke detector in the room.

1. When the waffle iron is still hot, turn the thermostat to maximum (position 10 - 300°C/572°F). When the temperature is reached, let the residues burn as long as smoke is released (more than 2 hours if necessary). This operation will burn and reduce to ashes all organic matters still present on the cooking plates.
2. Switch off the appliance and remove the plug from the socket.
3. While still slightly warm, brush the waffle iron with a brush, dry dish brush (or a **rotary nylon brush** if necessary) to completely clean the cast iron. Including between the teeth / pyramids.
4. Wait until the cast iron plates are cool. Then go to the "Coating application" step below.

• Coating application

If the baking plates are "sticky" and it is more difficult to remove waffles. We recommend performing a "coating application" of the cast iron.

Important : Ensure that you perform this task in a well ventilated area. The appliance may produce smoke, which is normal. Watch out for the smoke detector in the room.


1. The waffle maker must be perfectly clean (without dough residues, caramel, etc.).
2. Using a silicone brush, grease all the studs and inner edges of the cast iron with cooking oil.
3. Close the waffle iron using handles and plug the appliance.
4. Switch on the appliance and set the thermostat to maximum (position 10 - 300°C/572°F). When the temperature is reached, let heat for about 60 minutes. Grease several times in thin layers.
5. Leave the waffle iron open to let it cool. During this cooling, some surfaces may still be hot. Be careful to not burn yourself. This will cover the cast iron with a thin film of grease.
6. Use a potato starch liquid mixture (as explained above) in order to clean the cast iron plates. These « waffles » made of potato starch will be black caused by dirt.
7. After this cleaning, grease again the waffle maker before to use a normal waffle dough.




6/ WAFFLE MAKERS & ACCESSORIES AVAILABLES

- Appliance for 2 waffles :


Waffle maker ref. 52126 – Liege waffle (4x6)

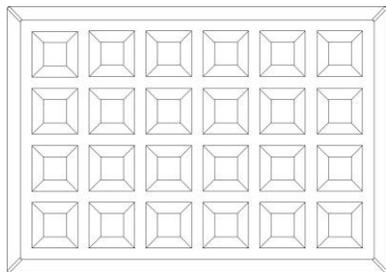


Waffle maker ref. 52123 – Liege waffle (4x5)

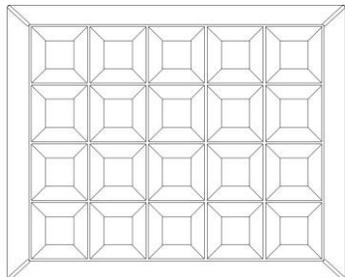

Waffle maker ref. 52119 – Brussels waffle (3x5)

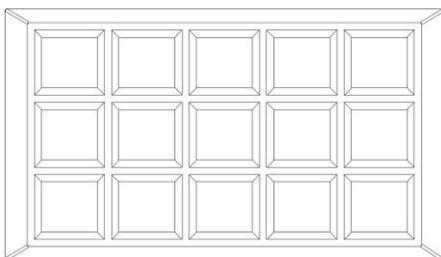

Waffle maker ref. 52117 – Fruits waffle (4x7)

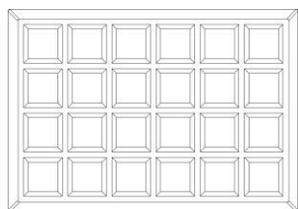

- Accessories

- Waffle fork
- Scraper (cleaning tool)
- Rotary nylon brush (cleaning tool)
- Accessory called Z
System to block the opening to 115°



Find all of our waffle makers, accessories and products on our website www.ampi.be.

7/ CONTACT

For any assistance, after-sales service, order, or other request, please contact us directly :

Ampi.be sprl - Zoning Industriel, Rue des combattants 45
4280 – Hannut - Belgium
Tél.: +32 19 63 63 98 - E-mail: info@ampi.be - www.ampi.be